



# Digital MagneCote

## General Use Instructions

We recommend that the following actions be taken before running Digital MagneCote for suitability and best results on your equipment –

- Set your printer to the heaviest paper weight setting
- Set fuser to lowest or mid-range temperature setting
- Use a bypass feeder when running Digital MagneCote
- Feed 8.5x11 sheets wide width first and 12x18 narrow width first (If your paper does not feed properly, switch the orientation)
- Only run a small number of sheets (5-10) through the bypass feeder at one time to avoid sticking and weight constraints
- Try running the product in all paper trays. In some cases, the product may run better through a paper tray.

This information is the best currently available on the subject and should be regarded only as a general guide to material properties and not as a guarantee. Contact Pat Semrow of Nekoosa Coated Products at [psenrow@nekoosacoated.com](mailto:psenrow@nekoosacoated.com) for additional information.